

Basic Setup Steps

1. Power the module and connect via ethernet to a computer.
2. Set IP address on computer to the same network as module.
(Ex: 192.168.1.50) *Note: restore computer settings after setup.*
3. To configure module, open web browser and enter:
`http://192.168.1.2/setup.html`
4. In General Settings under WiFi, enter the WiFi settings.
5. Assign the module a permanent IP address or enable DHCP.
6. Restart the module for the settings to take effect.

Factory Default Settings

IP Address: 192.168.1.2

Subnet Mask: 255.255.255.0

Control Page Web Address: `http://192.168.1.2`


Control Password: *(no password set)*

Setup Page Web Address: `http://192.168.1.2/setup.html`

Setup Username: admin

Setup Password: webrelay *(all lower case)*

X-4IOW | Pinout Diagram

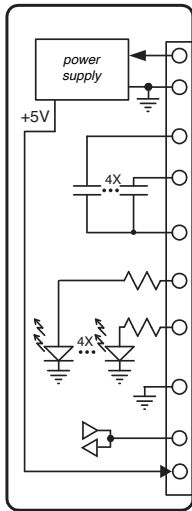

Power

Vin+ Power Supply Input (9-28VDC)

Gnd Power Supply Input (Ground)

Relays

Rly1 Relay 1 Normally Open

: 4X : 4X

Rly4 Relay 4 Normally Open

Com Common For All Relays

Inputs

In1+ Digital Input 1+

: 4X : 4X

In4+ Digital Input 4+

1-Wire Bus

Gnd Ground for Inputs & 1-Wire Sensors

Data Data

5Vo +5VDC Output

Connect temperature or other 1-Wire sensor(s)



www.ControlByWeb.com

1681 West 2960 South, Nibley, UT 84321, USA